

## GETTING STARTED WITH YOUR

# NEW GENERATION DAF

Your New Generation DAF is equipped with advanced features to help you the driver get the best from your truck in terms of both comfort and efficiency.

This guide will help you get to grips with some of the key new features.

All features contained in this guide are applicable to the **XF, XG and XG<sup>+</sup>**.

## EXTERNAL FEATURES


### Main Isolator (option)

- ▶▶ Due to the increase in consumables on the truck, it is **advisable to turn to the off position** if away from the truck overnight or at weekends.



### Access to AdBlue/Catwalk

- ▶▶ Press the black button **located on the metal bracket** and pull the deflector clear to access the AdBlue filler and gain **safe and easy access** onto the vehicle catwalk.

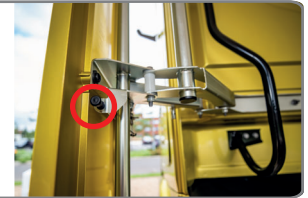

### Grille Opening & Cab Tilting

- ▶▶ Pull the release handle located **inside the passenger door**. With the main grille up gently pull open the side wings.

**NB if tilting the cab, the grille and both corner panels need to be open or damage will occur.**

The cab tilt bar, which is in two parts, can be found stowed in these corner panels.



### Filler Points

- ▶▶ Coolant, oil & screenwash filler points are **located under the nearside front corner panel** and all low fluid levels will be highlighted in the dash.



# GETTING COMFY

## Steering Column Adjustment

▶▶ On the floor on the left of the steering column is a release pedal.

**Press & hold this to unlock** the steering column, you can now adjust the height and angle of the steering wheel. **Releasing the pedal** will lock the steering column.

**Moving the steering wheel to the stow away position** will create more space and allows for easier and safer exit and entry to the cab.



## Door Control Panel - Mirrors

▶▶ Switch Functions:

Heated Mirrors

LH Main Mirror Select		RH Main Mirror Select
LH Wide Angle Mirror Select		RH Wide Angle Mirror Select
LH Window		RH Window
	Unlock/Lock	

The diagram shows a central door control panel with a grid of buttons. The top row has three buttons: LH Main Mirror Select, a Heated Mirrors button (with a wavy line icon), and RH Main Mirror Select. The second row has LH Wide Angle Mirror Select, a central directional pad (up, down, left, right arrows), and RH Wide Angle Mirror Select. The third row has LH Window, an Unlock/Lock button (with a padlock icon), and RH Window. The bottom row has an additional LH Window button, the central Unlock/Lock button, and an additional RH Window button.

## Door Control Panel - DAF Digital Vision System\* (option)

▶▶ Switch Functions:

Heated Cameras

LH Camera Select		RH Camera Select
AutoPan (follows trailer)		Camera Fold/Extend (use when going through truck wash)
LH Window		RH Window
	Unlock/Lock	

The diagram shows a central door control panel with a grid of buttons. The top row has three buttons: LH Camera Select, a Heated Cameras button (with a wavy line icon), and RH Camera Select. The second row has AutoPan (follows trailer) button, a central directional pad (up, down, left, right arrows), and Camera Fold/Extend (use when going through truck wash) button. The third row has LH Window, an Unlock/Lock button (with a padlock icon), and RH Window. The bottom row has an additional LH Window button, the central Unlock/Lock button, and an additional RH Window button.

\* A separate DAF Digital Vision System leaflet is available

# A FEW KEY NEW CONTROLS

## Right-Hand Stalk

Functions on the RH stalk are **Gear Selection, Eco Off, Urge to Move (option) and MX Engine Brake/Retarder.**

**Wheel** selects forward or reverse gears.

**Paddle the stalk** to upshift of downshift.

**Upper switch on end of stalk** selects manual operation & 'Tortoise'.

**Lower switch on end of stalk** selects Eco off & back to Eco.

**Pull stalk down** to engage MX Engine Brake which has 3 settings.



## Left-Hand Stalk

Functions on the LH Stalk:

Selecting the **A** on the wiper activates the rain sensor and will wipe the screen according to rainfall. **Sensitivity has 5 levels** adjusted on the inner wheel.

Screen wash – **when level is low a pop-up will appear in the dash.**

**Note:** A short press on the wash switch will allow one wipe.

Indicators have two options; **fixed or spring returned** which will activate for 5 blinks only.

**Main beam & horn.**



## Auto Lights

**Auto lighting defaults to 'on' at key on**, where the lights will activate when required.

**Note:** This is a comfort feature and external influences **such as fog, mist, smoke** may not be detected by the sensor. **In these instances, the lights must be operated manually.**



## Cab Auxiliary Heater - Timer & REST Function (optional)

The Auxiliary Cab Heater operation is incorporated in the climate control and **utilises the coolant and heater matrix** to warm the cab.

To operate the timer: Key on to the **first position and press switch 1** then turn the rotary switch to on and enter using switch 2.

A day will be displayed in the screen, **turn the rotary switch** to select the day you want the heater to start.

Once the correct day is selected enter by pressing switch 2. **Repeat process to select** the hour, minutes and then temperature.

**The timer is now set.** Turn off the key. The heater will shut down **when the ignition is turned on.**

When REST appears in the screen and with the engine off, you can select using switch 2 **to give up to 45 minutes** of heat from the engine.



**Scan this QR Code to view an overview of the New Generation DAF**

The DAF Driver Manual is also available 'in cab' on the Infotainment system or by contacting your local dealer.



**And to learn more about training on the New Generation DAF**  
simply scan this QR code:



### **Contact Information:**

DAF Trucks Ltd  
Haddenham Business Park  
Pegasus Way  
Haddenham  
HP17 8LJ  
[www.daf.co.uk](http://www.daf.co.uk)

NGD/TM/0122/100K

# QUICK START TO THE DIGITAL DISPLAY

CLASSIC THEME



MODERN THEME



## THEMES:

There are 2 alternative appearances or 'themes' which can be selected in the Settings Menu.


Pressing the RH steering wheel menu switch (see image bottom right of sheet), push right (toggle) to access the 'Vehicle Settings Menu' and scroll down to 'Display Settings' and enter, then scroll to 'Theme' where you can select your preference.



The Classic Theme shows your favourites at the bottom and at the top on the Modern Theme.

Favourites are simply selected using the Favourites switch on the RH steering wheel switch:

Press Favourites to bring up - scroll to choose and press to enter.

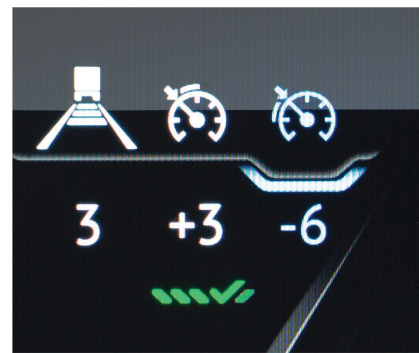

## SPEED CONTROL MENU:

The speed Control Menu is displayed on the Digital Display when the LH menu switch is pressed either prior to or during the drive.

**Adaptive Cruise Control (ACC):** can be set between 5 and off, 5 being the maximum distance between you and the vehicle in front.

**Downhill Speed Control (DSC):** Can be set between 15 and 3, 15 being the maximum speed allowed above the Cruise Set Speed. The higher this setting the more EcoRoll will engage - but be aware of speed limits!

**Predictive Cruise Control (PCC):** Can be set between 10 and off, 10 being the maximum speed drop allowed prior to cresting the hill.

**NOTE:** The more green ticks indicate a more fuel efficient setting.



## NOTE:

### ACC

Always check your settings before driving off! To enable ACC use the speed control menu to set to the required distance.

All Speed Control settings are retained after key off/on.



### SPEED CONTROL SWITCH

Sets the Speed Control Features and can be set PRIOR to driving.

To input your preferred settings: press the centre switch to bring up the menu and then scroll to adjust ACC up or down.

Press to enter to toggle to DSC and again using the switch to scroll up or down.

Enter again to toggle to PCC and scroll to adjust.



### CRUISE CONTROL SWITCH:

Press to set where your preset speed controls will be enabled.

Press +/- to increase and decrease set speed, and

RES to resume your last set speed - which is retained after key off.




### VARIABLE SPEED LIMITER SWITCH:

Press to set

Press +/- to increase and decrease

Using LIM will also allow EcoRoll

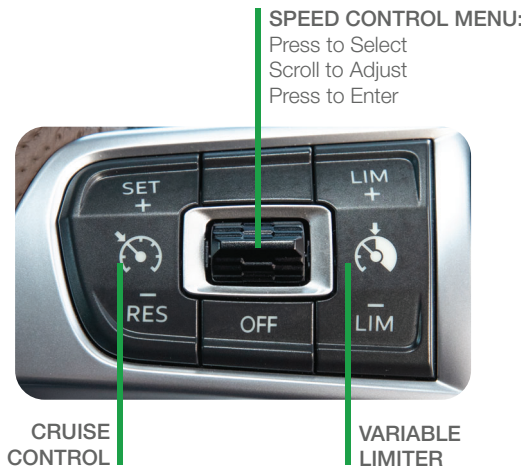

CRUISE CONTROL

VARIABLE LIMITER

LEFT HAND STEERING WHEEL SWITCH



## ACCESSING THE DIGITAL DASH DISPLAY & INFORMATION

Key on, wait for the vehicle to do its self-checks.

Press the Menu switch on the RH steering wheel control once. This will bring up the display main view.

In the top LH corner, you will see two icons. One for Vehicle Information the other for Vehicle Settings.

To switch between menus, push the menu switch to the right and the menu you are in is highlighted.

Vehicle Info menu -



This menu can be accessed when on the move or when stationary. To access the information, simply use the main menu switch and scroll the wheel up or down to move through the information list.

When you have highlighted the information header you want, simply press the menu switch once. The information will now be displayed to the right of the screen.

To exit, press back the return switch once to go back one step or press and hold for 2 seconds to exit the menu completely.


Vehicle Settings menu -



This menu can only be accessed when the vehicle is stationary.

From the default screen, press the menu switch once and then push the menu switch to the right (toggle) to move across to vehicle settings.

Once highlighted, press the menu switch once and then scroll the menu switch to highlight the menu headers. When you have highlighted the settings header, simply press the menu switch once. The settings to change will now be displayed to the right side of the screen.

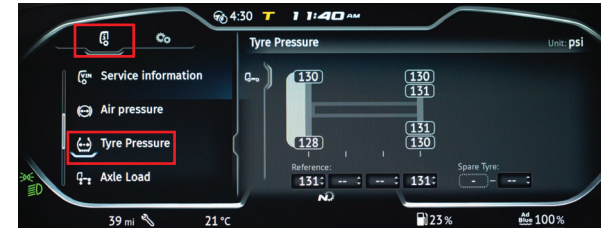

## EXAMPLE OF CHANGING A SETTING (Show Preceding Vehicle)

Once in vehicle settings use the menu switch to scroll down to Display Settings. Press menu once to highlight.

The right-hand side of the screen now shows various display settings.

Use the menu switch to scroll to Show preceding vehicle, press to highlight and use the menu switch to "tick" the box.

Show preceding vehicle is now set and will be visible in the display and will show the speed and distance between you and the preceding vehicle, whether on cruise settings or driving with the throttle.

To exit press the return switch once to go back one step or press and hold for 2 seconds to exit the menu completely.

MODERN THEME



## DISPLAY VIEWS

There are four dash displays to choose from. These views are displayed by using the scroll button.

- Complete driving overview screen
- Gauge view and favourites
- Night view with favourites
- Night view

MENU SWITCH (Access Info & Settings):  
Press to Select  
Scroll  
Push Right to Jump



FAVOURITES SWITCH:  
Use from Default Screen

RETURN SWITCH:  
1 Step Press Once  
Exit Menu Hold 2 Seconds

RIGHT HAND STEERING WHEEL SWITCH