Quick reference guide

TRAILE.

DO/AR =



A PACCAR COMPANY DRIVEN BY QUALITY

Introduction

Welcome to DAF Connect!

This Quick Reference Guide provides you as a new user of DAF CONNECT with quick and clear instructions how to use the main features.

Before getting started with DAF Connect you first need to receive an account. For registration purposes each customer is required to have one main account holder that needs to sign up using the Registration Webform available via your dealer. At the moment the dealer hands over your first vehicle with DAF Connect and activates the warranty, your account details will be sent to you by e-mail.

The Fleet Administrator has the ability to add new users via the Main Menu Admin and User Management in the DAF CONNECT Portal. More in-depth instructions are available on the Info-page, accessible through the Info Button on the DAF Connect Portal. The Info-Page is the starting point to answer your questions and to get support from DAF.

Dashboard: Quick personalised overview of fleet kpi's



GENERAL

- Show or hide your pre-defined components by ticking or unticking the relevant check box
- 2. Set your targets by manually indicating the thresholds

FLEET KPI

- **3.** Define your thresholds (> or < than set target)
- 4. Select time-period (last 7 days, 30 days or 90 days)

TODAY LIVE VEHICLES

3. Define your thresholds (> or < than set target)

VEHICLE UTILISATION

3. Select time-period (7 days, 30 days or 90 days)

ALERTS LAST 24 HOURS

Chart overview of all alerts that occurred in the last
24 hours divided per type of alert

Live Fleet: Realtime insight in vehicle status & position

An overview of the current locations and trip details of all your trucks.



ſ	Live Fleet & Messag	ges 2	(3 Search for	plac		Ģ	
l	User POIs	HERE POIs		Map Mode	1	Trip representation		
l	🗹 dealers (9)	V Hotel		🗹 Map View		🗹 Snail track		
l	🗹 other (5)	V Parking		Satellite		Dotted track		
l	Polygon (0)	Petrol Station		Terrain				
	🗹 factory (1)	Railway Station						

LIVE FLEET & MESSAGES

- 1. Enter a location to search and zoom into
- Show or hide any Point of Interest (POI) on the map by ticking or unticking the relevant check box
- 3. Switch view between map, satellite and terrain view
- Switch between Snail and Dotted track (snail = continuous line, dotted = arrows pointing in driving direction)



Entering Zone 12-ABC-3 3 days ago

Entering Zone

45-DEF-6 3 days ago

SELECT VEHICLES

- 1. Make a selection of all your vehicles by filtering on:
 - 1.1 Group 1.2 Vehicle type 1.3 Alert category 1.4 Alert level
 - 1.5 Other filters 1.6 Filter: Enter search term
- 2. All vehicles belonging to the selected group are displayed on the map

ALL SELECTED VEHICLES

- Select a specific truck to get more trip information and to see the latest trip of the truck plotted on the map
- **2.** The vehicle colour depends on the alert raised on the vehicle during the current trip. The vehicle status is reset at the beginning of another trip.
- **3.** There are 3 different vehicle statuses:
 - Driving Engine is on and vehicle is moving
 - Stopped Engine is off
 - Idling Engine is on and vehicle is not moving
- 4. The vehicles are coloured per alert level:
 - Yellow: Information alert raised for this vehicle
 - Orange: Warning alert raised for this vehicle
- Red: Critical alert raised for this vehicle

MESSAGES & ALERTS

- 1. Overview of all alerts that have been raised
- 2. Shortcut to logbook of all alerts
- 3. Definition of Event and Alert:

An event is displayed when the alert conditions are partly met, an alert is shown if all the alert conditions are fulfilled.

Example: A Fencing alert is defined for Entering zone with an additional filter 'Duration limit of 30 minutes'. An event is shown when the truck enters the zone. If the truck remains in the zone for > 30 min then an alert is displayed.

Fleet Fuel report: Detailed report on aggregated vehicle data

RESET SEARCH

CO2 EMISSION

35.042 to

v

01/11/2017

Column filte

 $\sqrt{}$

 $\sqrt{}$

Column filter

Column filte

4

Number of trips

Idle duration

CO2 emission

Number of trips

Distance done Fuel consumed

Vehicle name

Average speed

Fuel consumed

Max speed Number of trips

Distance

Fuel consumption

Sum of CO2 emission

Average distance per day

Average gross weight comb

Sum of idle duration

Fuel consumption

Distance Fuel consumed

Vehicle and Driver data available in customisable report.

Time range

Group: All Vehicle: All Utilisation: All From: 01/10/2017 00:00 To: 01/11/2017 23:59

FUEL CONSUMED

12083.5

01/11/2017

01/11/2017

17.93

29.478

1417.9

29.478

29.478

1

Table data info

Valı

116.9

359.3

36.9

116.9

359.3

DISTANCE

44.801 km

NUMBER OF TRIPS

01/15/2017

DISTANCE

01/15/2017

47.3

38.8

18.8

47.3

38.8 85.7 56

Vehicle

12-ABC-3

45-DEF-6

78-GHI-9

10-JKL-1

Search in table

88.8 36

85.7 56

86.2

88.8

36

From

То

00:00

FUEL CONSUMPTION

FUEL CONSUMED

01/15/2017

FUEL CONSUMPTION

01/15/2017

0.339 25.09

1.042

0.107

0.339

1.042 31.88 0.00

31.88 0.00

25.09

4.39

0.004

39

13.17

17.89

24.47

13.17

17.89

27l/100 km

Search is limited to 3 months

IDLE DURATION

104.06.07

01/10/2017

01/10/2017

116.9

359.3

36.8

116.9

359.3

Consumption (I/100km)

Report parameters

Vehicle group

NUMBER OF TRIPS

1070

01/10/2017

01/10/2017

Page size 5

100

÷

81.8

11.1

74.2

90.3

Charts

(s) 80

of tri

(num 0

(km) 4k og 3k Je 2k 1k

AB123

CD456 1223 87.4

EF789

GH012

IJ345

2

3

4

Banking

40 Dper 20

5k

Vehicle

REPORT PARAMETERS

- 1. Select vehicle or driver (*) report
- 2. Select specific vehicle or vehicle group for their report results
- **3.** Manually set time range or choose a pre-defined time range (*) available in case Driver Privacy consent is enabled

GENERAL

- **1.** Summary of your selected vehicle (group) and time range
- 2. Overview of your search results
- 3. Show or hide specific topics by ticking or unticking the relevant check box

CHARTS

1. Show or hide specific Charts by ticking or unticking the relevant check box

DETAILS

- 1. Number of rows to display
- 2. Filter on any search term
- 3. Select specific vehicle or driver to see the detailed information
- **4.** Show or hide specific topics by ticking or unticking the relevant check box
- 5. Export data to Microsoft Excel by clicking the export button

RANKING

1. Compare your vehicles based on their fuel consumption

Report schedule: Receive reports by e-mail

Send automated reports directly to your e-mail account.

PARAMETERS

- 1. Select the report type
- 2. Select a specific vehicle group or vehicle
- 3. Specify the frequency of receiving the selected report (daily, weekly, biweekly or monthly) starting from
 - Next day (Daily)
 - Monday coming week (Weekly)
 - Monday first biweek (Biweekly)
 - First of next month (Monthly)



SCHEDULED REPORTS

- 1. Number of scheduled reports per page
- 2. Filter on any search term
- 3. Show or hide specific topics by ticking or unticking the relevant check box
- 4. Disable, edit or delete a specific scheduled report by clicking the relevant button
- 5. The columns can be sorted by clicking on the column name

Alerts: Get notified about significant events

Set alerts on vehicles that you want to be informed about with your own specific thresholds.

SEARCH FILTERS

- **1.** Make a selection of all your existing alerts by filtering on:
 - **1.1** Category (e.g. Fuel & Driver performance)
 - **1.2** Alert Type only selectable if at 1.1 a category is selected (e.g. Excessive Average Speed)
 - **1.3** A specific vehicle group or vehicle
 - 1.4 Status (Active or Suspended)

Search filters	12 ÷ s	elected group/vehi	Lia Lie Lai Lia Lia Lia Lia Lia Lia Lia Lia Lia	14 ÷	RESET FILTERS FILTER LIST
My alert(s)	Search in table	2			ADD NEW ALERT
Name	Category	Alert type	Threshold	Group/vehicle	Status
Area Frankfurt	Cencing	Entering Zone		Default Base	Active
Movement in Weekend	2 3	Excessive distance done	600 km		Active
Leaves Belgium	Fencing	Exiting site		Distribution	Suspended 📋 < 🔟
		E 1 10 11	000	5	

MY ALERTS

- 1. Number of rows to display
- 2. Filter on any search term
- 3. Click the alert for more detailed information or to edit or to activate/suspend the alert
- 4. Duplicate, share/unshare or delete a specific alert by clicking the relevant button

ADD NEW ALERT

- Create new alerts for yourself and your colleagues by clicking the "Add new alert" button
 - The alerts are registered in a Logbook (see Live Fleet menu) and can be sent by e-mail or SMS
- For more information concerning the creation of a new alert visit the Information page to view the "How to Movies" for in-depth instructions

Alert Notification

Select notification method.

CREATE NOTIFICATION:

- 1. Configure the frequency and the validity period of the notification
- 2. Define a notifcation label and click the Add button
 - 2.1 Select a mode how the notification will be sent: by e-mail or SMS
 - 2.2 Depending on the selected mode enter an e-mail address or a phone number
 - **2.3** Change the e-mail subject/description or SMS text message

Multiple notifications per alert are possible

Create a new alert Cancel		Create Notification
T STEP 1 PROPERTIES PILTERS STEP 3 NOTIFICATIONS ACTIVATE		Frequency Each Time
Summary	1	Validity Always
Name: Alert name Category: Fencing Alert type: Exiting corridore - Real time Validity period: Always Vehicles: default Base Notifications	_	Recipients
	2 - 2	Recipients Label : Alert group A
Notification limits		
PREVIOUS STEP NEXT STEP	2.2	Alert group A : Email : Email Address * Iname@test.com
		Send Message(S) : Send Message(S) :
	2.3	Mail Subject : name@test.com SMS text : Average speed is above threshold Mail Subject Description : Average speed is above threshold 2.3

User Management

Manage and create new users for your company.

lser management				
lser management				ABB HEIT OCEN
ilters				~
Name	2			
Group			÷	
ubscribers All	0		Include users wit	h 'All subscribers' rights
Role All			ŧ	RESET FILTERS FILTER LIST
Show 10				3
Show 10	E-mail	Role	User group	3 Actions
Isers Show 10 Name Name A	E-mail name A@test.com	Role Fleet exec	User group Group 1	Actions
Show 10 Name Name A Name B	E-mail name A@test.com name.B@test.com	Role Fleet exec Fleet admin	User group Group 1 Group 2	Actions 世
Isers Show 10 Name Name A Name B Name C C 2	E-mail name.A@test.com name.B@test.com name.C@test.com	Role Fleet exec Fleet admin Dispatcher	User group Group 1 Group 2 Group 3	Actions 世 世
Sers Show 10 Name Name A Name B Name C Name C	E-mail name.A@test.com name.B@test.com name.C@test.com name.D@test.com	Role Fleet exec Fleet admin Dispatcher Driver	User group Group 1 Group 2 Group 3 Group 4	Actions 面 面 面
Sers Show 10 Name Name A Name B Name C Name C Name E	E-mail name.A@test.com name.C@test.com name.C@test.com name.D@test.com	Role Fleet exec Fleet admin Dispatcher Driver Fleet exec	User group Group 1 Group 2 Group 3 Group 4 Group 1	Actions
Show 10 Name Name A Name A Name C Name C Name E Name F	E-mail name A@test.com name.C@test.com name.D@test.com name.D@test.com name.F@test.com	Role Fleet exec Fleet admin Dispatcher Driver Fleet exec Fleet exec Fleet admin	User group Group 1 Group 2 Group 3 Group 4 Group 1 Group 2	Actions
Show 10 Name A Name A Name B Name C Name C Name E Name F Name G	E-mail name A@test.com name.B@test.com name.C@test.com name.C@test.com name.F@test.com name.F@test.com	Role Fleet exec Fleet admin Dispatcher Driver Fleet exec Fleet admin Dispatcher	User group Group 1 Group 2 Group 3 Group 4 Group 1 Group 2 Group 2 Group 3	Actions

ate a new user	1.1	(1.2)	1.3	••
STEP 1 ENTER USER INFO	TMATION 2 STEP 2 SELECT ROLE	3 SELECT USER GROUP	4 STEP 4 VALIDATION	
count information		_		
Login email : *	myemail@company.com			
Salutation : *	⊖ Mr ⊖ Ms			
First name : *	First name			
Last name : *	Last name			
Birth date :	yyyy-mm-dd			
Service Subscriber :	Subscriber A			
ferences	2			
Language : *	Select a language	Vehicle Display (defaul	t) : Name	÷
Time zone : *	Select or type the name of your timezone 🔻)		
Units : *	Select a unit system \$)		
Currency : *	Select a currency \$			

FILTERS

- 1. Enter a specific name / part of a name
- **2.** Select a user group
- 3. Select a specific subscriber
- 4. Select a specific role

USERS

. .

- **1.** Number of users to display
- 2. For more detailed information select a specific user by clicking the user name
- 3. Delete user

ADD NEW USER

1. Create new users by clicking the "add new user" button

ENTER NEW USER INFORMATION

- **1.** Fill in account information (e-mail address etc.)
- 2. Set preferences (language, time-zone, unit, currency, date format, vehicle display)

NEXT STEPS TO CREATE USER

- **1.1** Select the role of the new user
- **1.2.** Select the user group the new user will have access to
- 1.3. Verify the input of user information, role selection and user group selection

DAF TRUCKS N.V. part of PACCAR Inc.,

is one of Europe's most successful truck manufacturers. The key to this success is outstanding tractor units and rigids, backed up by the correct services. This is all supported by a network of more than 1,000 independent dealers in Europe, the Middle East, Africa, Australia, New Zealand, Taiwan and Brazil. DAF has its own production facilities in the Netherlands, Belgium, the UK and Brazil. In addition to trucks, DAF develops and manufactures components such as axles and engines for bus and coach manufacturers all over the world.

You can find more information and dealer addresses at www.daf.com

DAF Trucks N.V. Hugo van der Goeslaan 1 P.O. Box 90065 5600 PT Eindhoven The Netherlands Tel: +31 (0) 40 21 49 111 Fax: +31 (0) 40 21 44 325



22-4-4-6-5-7