

# GETTING STARTED WITH THE DAF DIGITAL VISION SYSTEM

The DAF Digital Vision System is an option consisting of **cameras outside the cab, and interior displays**. These camera systems offer an improved direct view through the windscreen and side windows, **along with improved indirect vision** to the rear in all weathers.



## Door Open Appearance

When either door is opened both the left and right screens become active.

The upper section is the **main view**.

The lower section is a **wide angle view**.



## Key On Appearance

At key on all screens become active

After a few seconds a blue horizontal line appears in the left and right display - **This blue line is used to indicate the rear of the trailer.**



If you have swapped trailers the blue line needs to be adjusted to the new trailer. If not, simply press and hold the button for 2 seconds to confirm the current setting.

## Door Control Panel



## Trailer Length Calibration



**Adjust the blue line by using the control button** to align with the end of the trailer. Then press either the left or right camera button on the door control panel to accept the setting.

**Tip:** Use a traffic cone or similar positioned at, or slightly beyond, the rear (comfort zone) of the trailer.

Move the blue end of the trailer line **to the same position as the cone** and store this setting **by pressing either the left-hand or right-hand camera button**.

You do not need to repeat this action at every key on, only if you have swapped trailers. **However it's recommended that you acknowledge the trailer setting** by pressing either camera button before setting off.

## Camera View Adjustment



Once you've calibrated for the trailer length, **if you want to, you can adjust the view from each camera** just as you do with the mirrors.

Once adjusted the **save icon** will appear in the upper corner. **Press either left-hand or right-hand camera buttons for 2 seconds** to save the setting.



## Digital Display Overlay



To support the driver digital display overlays are used to help you **when being overtaken or manoeuvring**.

**Red line** - the end of the trailer as set by the blue line calibration

**Yellow lines** - to help judge a safe distance to pull out ahead of an approaching vehicle

When reversing the **overlay changes to:**

**1 green line** – clear to proceed with plenty of space if no obstacle below this line

**1 yellow line** – “almost there!”

**Red line** - the end of the trailer

These lines are non-adjustable

# ADDITIONAL FEATURES:

## Brightness Adjustment



In 'Settings Menu':

**'Display Settings/Brightness Adjustment'** which adjusts all monitors including the Infotainment system.



The brightness adjustment also controls the optional **DAF Corner View Camera monitor**.

## AutoPan

The AutoPan function enables the camera view to **follow the rear of the trailer** whilst turning.

The AutoPan function can be activated / de-activated **by pressing the AutoPan switch on the door control panel**.

When AutoPan is selected the switch will be illuminated and will be **retained after key off/on**.




## Folding the Camera Arms

The camera arms can be folded in to protect them from damage when negotiating narrow spaces **and when using a drive through vehicle wash**.

**Simply press the Fold button on the Door Control Panel**, and again to extend once through the wash.



## ADDITIONAL FEATURES:

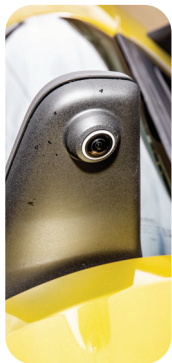


### DAF Corner View

The front view mirror and kerb view mirror can be replaced by the DAF Corner View which provides the driver with a **continuous view of cyclists, pedestrians, obstacles, and other road users** in the area to the front and nearside of the vehicle.

The camera's high sensitivity to light **provides an optimum image in low light conditions** and, if required, the camera will automatically be heated for defrosting purposes.

**Give the corner view camera a wipe** on your routine vehicle checks.

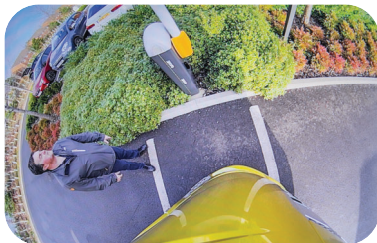

### A Few Pointers

Here are a few useful Hints & Tips:

- 1: Always ensure cameras are folded in **when using a drive through vehicle wash.**
- 2: **Familiarise yourself with The DAF Digital Vision System** care in the DAF Driver Manual.
- 3: Monitors **will remain live for some time** once the ignition has been switched off.
- 4: Keep the DAF Corner View Camera (option) clean by **wiping with a clean soft cloth.**
- 5: When carrying out your daily checks you can **place your hand over the bottom of the monitor to check the dimming function** is working correctly (see image p3).

GET TO GRIPS QUICK

### Contact Information:

DAF Trucks Ltd  
Haddenham Business Park  
Pegasus Way  
Haddenham  
HP17 8LJ  
[www.daf.co.uk](http://www.daf.co.uk)

DDVS-02/22